



**PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY**



Also check out YOUTUBE instruction ↴



<https://youtu.be/uNgNSSNX6No>

## **SPECIAL KROME 1K Base Color Black 【KB1K-SP】**

**1: Shake the spray can well before painting.**

Shake the spray can well before painting, and shake it occasionally while painting





## 2: Apply paint evenly

The distance from the painted surface is 15-20 cm. Move in one direction at a constant speed.

**\* Apply multiple layers while drying at intervals of 3 minutes.** Do not let the spray lie down as much as possible.

Please paint so that it is as vertical as possible to the object to be painted as shown in image 1.

Please note that if you let the spray lie down as shown in image 2, you will not be able to paint beautifully!

If you use it while it is lying down, the gas may come out and you may not be able to use it to the end.

## 3: After applying the base color, let it dry well before moving on to the next step.

**When the paint is finished as shown in Image 4, dry naturally at 20°C for 3 hours or more.**

**The key is to dry it thoroughly until completely hardened.**

\*Terra Krome will not develop its true color if it is not painted glossy first as shown in image 3.

Be sure to paint so that it becomes glossy as shown in image 4.



Image 1



Image 2



Image 3



Image 4

Next stage is to go to TERRA KROME paint ➡





## TERRA KROME 【TRK-SP】

### 1: Shake the spray can well before painting.

Shake the spray can well before painting, and shake it occasionally while painting.



### 2: Apply paint evenly

Apply thinly and evenly 3 to 4 times.

The distance from the painted surface is 15 to 20 cm. Move in one direction at a constant speed.

**\* Apply multiple layers while drying at intervals of 3 minutes. Do not let the spray lie down as much as possible.**

Image 5 is immediately after painting. When it dries, plating color will appear like image 6.

\*Do not paint while the gray part like image 5 remains.

It may cause unevenness and poor color development.

### 3: After applying TERRA KROME, dry it well before moving on to the next step

After painting, dry naturally at 20°C for 3 hours or more.

The key is to dry it thoroughly until hardened.

\*Insufficient drying may cause cloudiness.





Image 5



Image 6

Lastly paint the clear topcoat. ➡







## Special KROME 1K Topcoat 【KCL1K-SP】

### 1: Shake the spray can well before painting.

Shake the spray can well before painting, and shake it occasionally while painting.

The [KCL1K-SP] does not make any sound because it does not contain stirring balls.



### 2: Apply paint evenly

For the first time, keep a distance of 20 to 30 cm and apply a thin coat like image 7.

Move in one direction at a constant speed. Dry at 20°C for at least 1 hour.

\*Please note that if you apply a thick layer from the first time, cloudiness will occur.

After the second time, keep a distance of 15 to 20 cm from the painted surface and apply two coats. Move in one direction at a constant speed.

\*Apply multiple coats while drying at intervals of 3 minutes. Do not let the spray lie down as much as possible.


Dry completely to finish! (images 8 & 9)



Image 7



Image 8

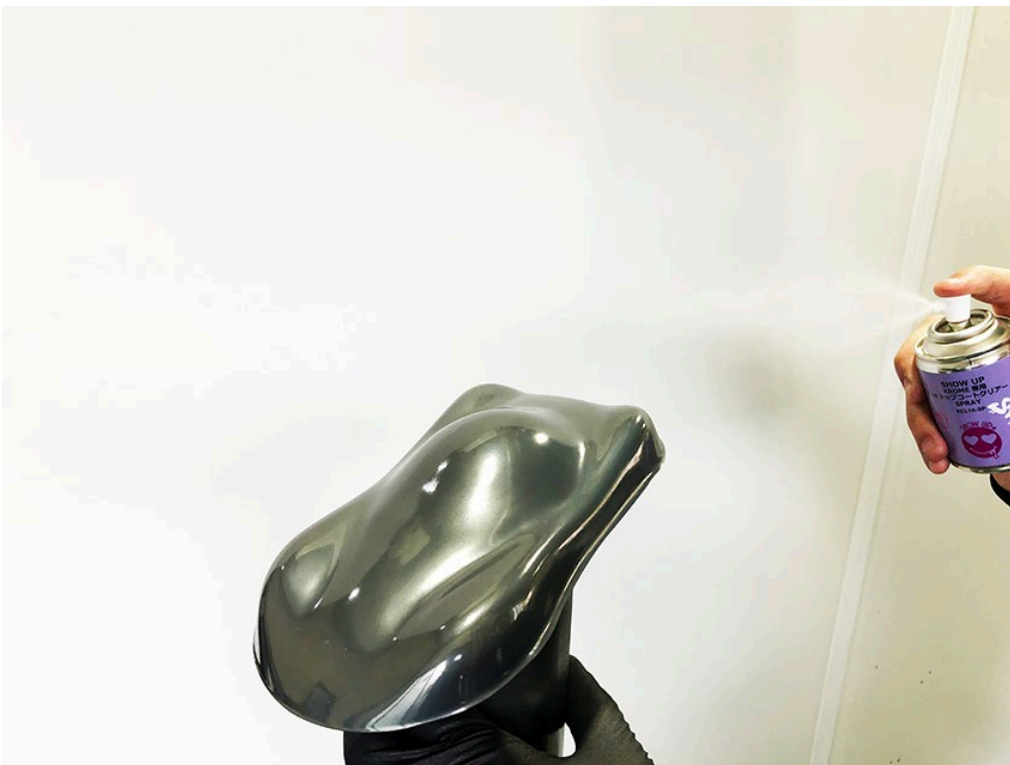

**TERRA** KROME  
push your limits  
**SPRAY**



Image 9



Signal Inc., SHOW UP Division, 2-6-8 Aoshinke Mino Si Osaka, Japan 562-0024 Tel. +81 72-727-7123

[Go to product page.](#)

**TERRA** KROME  
push your limits  
SPRAY